

We have taken road safety
to the next level!

PRACTICAL REMOVABLE SYSTEM

- Removable traffic control bollard developed for temporary or permanent access management in a wide range of applications
- Durable design resists impacts, and the Quita-Pon® quick-release system enables rapid removal to restore vehicle access when needed
- Suitable for pedestrian zones, controlled-access areas, and temporary event traffic management
- Permanently anchored base delivers dependable stability, and the secure locking system restricts unauthorized removal



Product Features

- Galvanized steel body available in standard traffic colors: orange, yellow, red, or black, depending on the application
- Black polymer base with UV protection for reliable outdoor performance
- Designed to withstand moderate impacts
- High-intensity reflective band improves visibility at night and in low-light conditions
- Base mounts permanently to the pavement with anchors and an extra-long mounting bolt (not included), allowing the bollard body to be quickly inserted and locked into place
- Rigid design provides a strong visual and physical barrier; when the bollard is removed, the remaining low-profile traffic separator keeps the surface clear, and the protective cap system covers the mounting socket
- Removable design simplifies cleaning, replacement, and relocation without additional civil work


Recommended applications:

- Street and pedestrian access control
- Perimeter protection
- Temporary work zone traffic control
- Parking lot delineation
- Restricted and secure areas
- School zones



Dimensions are nominal and may vary by $\pm 2\%$

Dimensions are in **inches**

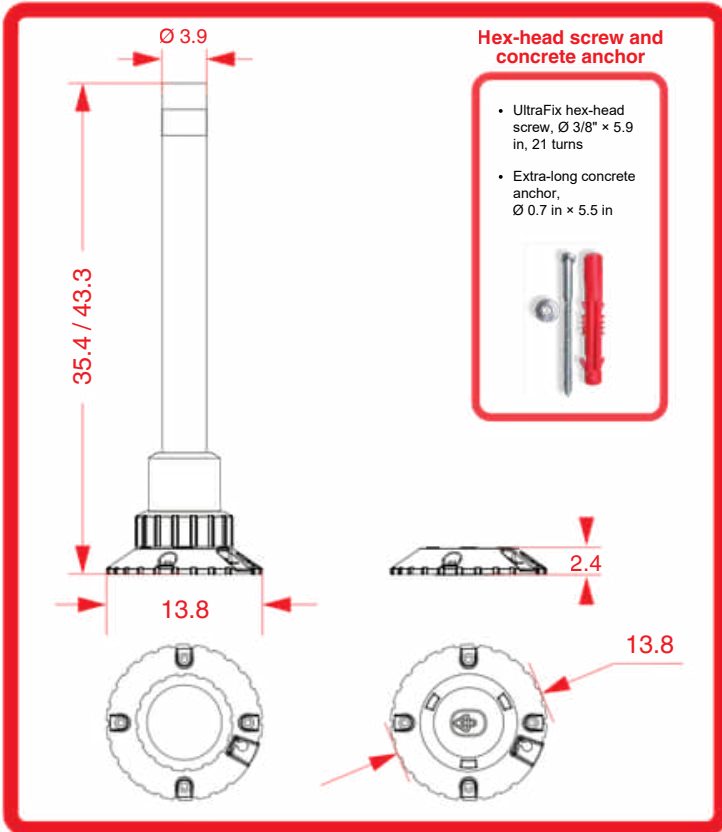

Dimensions

Body diameter:	6.6 in
Base:	$\varnothing 13.8$ in $\times$ 2.4 in H
Overall height:	35.4 or 43.3 in

Anchoring System

- Mark the four anchor holes at the installation point using the bollard base as a template
- Drill the anchor holes to a depth of 7 inches using a hammer drill and a $3/4"$ concrete drill bit
- Insert the extra-long concrete anchors into each concrete anchor hole
- Position the bollard on the base
- Install the $3/8"$ screw and flat washer
- Tighten using a $9/16"$ socket
- Complete the installation

